

ACCEO TRANSAXION POINT OF SALE

BARCODE SCANNER PROGRAMMING GUIDE

MODELS TARGETED BY THIS GUIDE



LS-9208 [USB]



LS-2208 [USB]

PROGRAMMING PROCEDURE

PROGRAM EACH BARCODE SCANNER

- Scan the barcodes with each barcode scanner to be programmed, in the order 1 to 8

CONTACT SUPPORT IN CASE OF PROBLEMS

- Don't hesitate to contact us as required, specifying the barcode number (1 to 8)


ACCEO TRANSAXION POINT OF SALE

1



[SET ALL DEFAULTS]

2

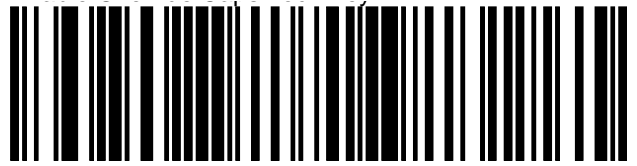

[ENABLE OVERRIDE CAPS LOCK KEY]

3



[IBM PC/AT & IBM PC COMPATIBLES]

4



[CONVERT UPC-E TO UPC-A - ENABLE]

5



[SCAN OPTIONS]

6



[<DATA> <SUFFIX>]

7



[ENABLE CAPS LOCK ON]

8



[ENTER]