


PIN Pad initialization steps

acceo transaxion pos

- 1- Press <F8> Cash operation.
- 2- Press <CTRL-N> Initialize terminal.

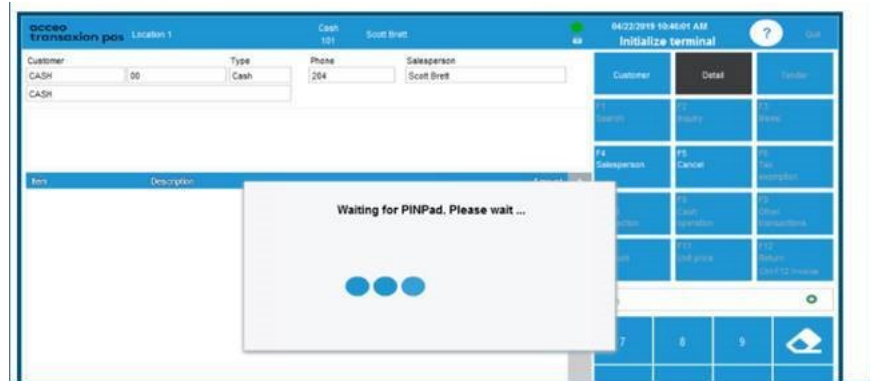

acceo profitmaster

This step must be done from the terminal that the PIN pad is connected to.

- 1- Enter application code **CUX** (CDI terminal initialization).
- 2- Press <F5>. Your PIN pad will now be initialized. This process takes approximately 15 seconds.

If the initialization is unsuccessful, remove power from the PIN pad, ensure all connections are tight, wait one minute and try again.

If it is still unsuccessful, "END" out of the terminal, cycle the power from the PIN pad again, wait until display shows « welcome » and then re-login and try **CUX** again.

If it is still unsuccessful please contact ACCEO Profitmaster support (1 866 308-4315).

```

*** CREDIT/DEBIT TERMINAL INITIALIZATION ***          CUX 314

STNO   DEVICE   STATION NAME   ECR ID   TRANSAX ID
-----
S002   ttyp20     DorothyC       66007028

                                F5Initialize Terminal
ShF1Help   ShF2Keys   EscBack       F6Suspend   F12Main
    
```

Typically, initializing the PIN pad is done when the prompt « PLEASE INITIALIZE - RUN CUX » appears after a transaction is completed or if the PIN pad has its power cycled and the PIN pads display panels reads « CHECK CONNECTION » however, this can be done throughout the day.